



## دستورالعمل سیف باکس مدل هوم سیف با قفل لمسی، اثر انگشتی



### خدمات پس از فروش

☎ ۰۲۱-۹۱۳۰۳۷۱۳ (۱۹۴)

☎ ۰۹۳۳۸۶۱۹۱۱۹

☎ ۰۹۱۰۸۶۱۹۱۹۱

🌐 [www.sadidsafe.com](http://www.sadidsafe.com)

## • مدل اثر انگشتی Home Safe-Finger Print





## صندوق نسوز سدید

گاوصندوق‌های نسوز و ضد سرقت تولید شده توسط شرکت فناوران ایمن گستر سدید، نسل جدید این محصولات در ایران هستند. در ساخت درب و بدنه این صندوق‌ها از ورق‌های فولادی با ضخامت بالا استفاده شده است. برای مقاوم سازی این گاوصندوق‌ها در برابر رطوبت و حرارت، پشم سنگ به کار رفته است. لولای درب گاوصندوق‌های نسوز سدید در فضای داخلی تعبیه شده است. امکان اتصال صندوق‌ها به زمین و دیوار با استفاده از رول بولت‌های فولادی فراهم شده است.


نحوه نصب صندوق به دیوار

نحوه نصب صندوق به زمین

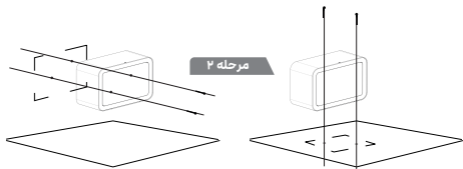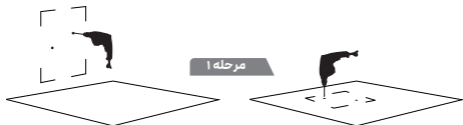


نقاط نصب زمینی در زیر  
پایه‌ها قرار دارد

## اجزای تصویری صندوق

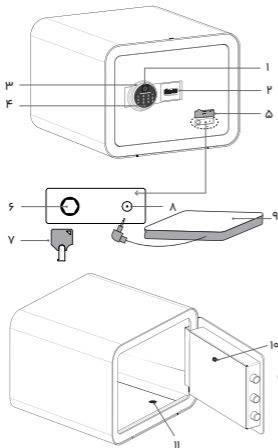

- ۱- اسکنر اثر انگشت
- ۲- درپوش محفظه باتری
- ۳- دستگیره درب
- ۴- صفحه کلید لمسی
- ۵- درپوش آهن ربایی
- ۶- ورودی کلید اضطراری
- ۷- کلید اضطراری
- ۸- ورودی سوکت پاوربانک
- ۹- باتری پشتیبان (پاوربانک)
- ۱۰- دکمه ریست

- ۱۱- محل نصب صندوق به زمین
- ۱۲- محل نصب صندوق به دیوار



نمای پشت صندوق

## راه اندازی برای مرتبه اول

سیف باکس های سدید به وسیله رمز عبور پیش فرض کارخانه و نیز با استفاده از کلید اضطراری (در برخی مدل ها) بازگشایی می شوند.

## باز گشایی بارمز عبور

- ۱- ابتدا در پوش مشکی رنگ محفظه باتری (بخش مستطیلی سمت راست قفل) را به سمت راست حرکت داده و باز نمایید.
- ۲- سپس باتری‌های مورد نیاز را وارد نمایید؛ چراغ قفل روشن خواهد شد.
- ۳- سیف باکس‌های سدید بارمز کارخانه ۱۲۳۴ فعال می‌باشند.
- ۴- رمز ۱۲۳۴ را وارد نموده و کلید '#' را فشار دهید؛ چراغ سبز بالای قفل روشن خواهد شد.
- ۵- دستگیره دور قفل را در جهت حرکت عقربه‌های ساعت بچرخانید تا قفل باز شود.

## تغییر رمز عبور

- ۱- دکمه ریست که در پشت درب (داخل صندوق) داخل شیار دایره‌ای تعبیه شده است را فشار دهید.
- دو صدای بوق خواهید شنید و چراغ آبی روشن خواهد شد.
- ۲- رمز عبور جدید (۴ الی ۸ رقم) را وارد نموده و دکمه '#' را جهت تایید بفشارید.
- چراغ سبز به نشانه تایید روشن خواهد شد.

**توجه:** برای حصول اطمینان، در حالی که درب صندوق باز است رمز جدید را یکبار امتحان نمایید!

## افزودن اثر انگشت

- ۱- دکمه ریست که در پشت درب (داخل صندوق) داخل شیار دایره‌ای تعبیه شده است را بوسیله یک شی نوک تیز مانند خودکار فشار دهید.
- دو صدای بوق خواهید شنید و چراغ آبی روشن خواهد شد.
- ۲- انگشت مورد نظر را روی حسگر اثر انگشت بگذارید.

دو صدای بوق از قفل خواهید شنید.  
۳- انگشت را برداشته و دوباره روی حسگر قرار دهید.  
صدای آلام طولانی به نشانه تایید و تکمیل فرآیند را خواهید شنید.

**توجه:** برای حصول اطمینان، در حالی که درب صندوق باز است اثر انگشت جدید را یکبار امتحان نمایید.

### بازگشایی با کلید اضطراری

- ۱- لوگوی آهن ربایی پایین صندوق را بردارید تا ورودی کلید اضطراری و باتری پشتیبان نمایان شود.
- ۲- کلید را وارد نموده و برخلاف جهت عقربه‌های ساعت بچرخانید و در نظر داشته باشید تا کلید را بیرون نکشید؛ در غیر این صورت قفل به موقعیت بسته بودن خود خواهد گشت.
- ۳- دستگیره را در جهت حرکت عقربه‌های ساعت بچرخانید تا درب باز شود.
- ۴- درب جعبه باتری داخلی که در پشت درب تعبیه شده را باز نمایید.
- ۵- چهار عدد باتری نیم قلمی را داخل جعبه باتری قرار دهید.

### حالت بازگشایی همزمان رمز و اثر انگشت

پس از تعریف رمز و اثر انگشت جدید، عدد ۱ را لمس نمایید و سپس دکمه ریست پشت درب را فشار دهید  
برای بازگشت به حالت بازگشایی فقط رمز و یا اثر انگشت، همین فرآیند را مجدداً تکرار نمایید.

### باز کردن صندوق

۱- رمز عبور را وارد نموده و دکمه “#” را بفشارید،  
(و یا انگشت مورد نظر را بر روی حسگر بالای قفل  
قرار دهید).



چراغ سبز روشن و درب باز خواهد شد.

۲- دستگیره دور قفل را به جهت حرکت عقربه های  
ساعت بچرخانید تا درب باز شود.

### بستن صندوق

۱- درب را ببندید.

۲- دستگیره را بر خلاف جهت عقربه های  
ساعت بچرخانید.



### آژیر هشدار رمز اشتباه

در صورت ورود رمز اشتباه برای ۳ بار، آژیر هشدار به مدت ۶۰ ثانیه فعال  
خواهد شد.

**توجه:** جهت خاموش شدن آژیر هشدار، رمز یا اثر انگشت صحیح را وارد نمایید.

### فعال شدن آژیر ضربه و جابجایی

۱- دکمه “\*” را بفشارید و نگهدارید.

• صدای بوق طولانی خواهید شنید.

• آژیر فعال گشته است.

**نکته:** در صورت ورود شوک یا ضربه، آژیر هشدار به مدت ۶۰ ثانیه فعال  
خواهد شد.

**توجه:** جهت خاموش شدن آژیر هشدار، رمز یا اثر انگشت صحیح را وارد نمایید.

### نحوه تعویض باتری

- ۱- در هنگام روشن بودن قفل، در صورت مشاهده روشن شدن چراغ های قرمز، از ضعیف بودن باتری مطلع خواهید شد و می بایستی باتری را تعویض نمایید.
  - ۲- ابتدا در پوش مشکی رنگ محفظه باتری (بخش مستطیلی سمت راست قفل) رابه سمت راست حرکت داده و بازنمایید.
  - ۳- سپس باتری های مورد نیاز را وارد نمایید.
- چراغ قفل روشن خواهد شد.

### بازگشت به حالت کارخانه

- ۱- دکمه «ریست» پشت درب صندوق را به مدت ۵ ثانیه فشار دهید.
- صدای بوق طولانی شنیده خواهد شد.
  - اثر انگشت و رمز فعلی حذف خواهند شد.
  - قفل به تنظیمات اولیه با رمز ۱۲۳۴ باز خواهد گشت.

### اطلاع و هشدار

- دفترچه راهنما را در داخل محصول قرار ندهید.
- در صورت عدم استفاده از صندوق برای مدت طولانی، باتری ها را از قفل خارج نمایید تا از خرابی سیستم الکترونیکی قفل، جلوگیری بعمل آید.
- در صورت نصب صندوق به دیوار، از استحکام و ایمن بودن دیوار، اطمینان حاصل نمایید.



## **Factory Reset**

1- Press the **“reset”** button behind the safe door for 5 seconds.


- A long beep will sound.
- The current fingerprint and password will be deleted.
- The lock will return to the initial settings with the password 1234.

## **Notifications and Warnings**

- Do not place the user manual inside the Safe Box.
- If the safe is not used for an extended period, remove the batteries from the lock to prevent damage to the electronic lock system.
- Please make sure of the strength and safety of the wall or the Ground Before installing the safe Box.

## Closing the Safe Box

1. Close the Door
2. Rotate the lock handle Counter clockwise to lock the door

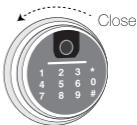

## Incorrect Password Alarm

If an incorrect password is entered three times, the alarm will activate for 60 seconds.

**Note:** To turn off the alert alarm, enter the correct password or fingerprint.

## Activating the Shock and displacement alarm

- 1- Press and hold the “\*” key
- You will hear a long beep.
  - The alarm is now activated!

**Note:** The alarm will sound for 60 seconds if the safe experiences shock or impact.

**Note:** To turn off the alarm, enter the correct password or fingerprint.

## Battery replacement procedure

- 1- If the red lights turn on while the lock is active, the batteries are low and need to be replaced.
  - 2- slide the black cover of the battery compartment (the rectangular section on the right side of the lock) to the right to open it
  - 3- insert the required batteries
- The lock light will turn on

**Note:** For assurance, while the safe box door is open, test the new password once!

### Opening with the Emergency Key


1. Remove the magnetic logo at the bottom of the box to reveal the emergency key entry and backup battery port.
2. Insert the key and turn it counterclockwise, make sure not to pull the key out; otherwise, it will return to its original position.
3. Rotate the handle in the clockwise direction to open the door.
4. Open the internal battery box located behind the door.
5. Place four AAA batteries inside the battery box.

### Simultaneous Password and Fingerprint Unlock Mode

After setting up the new password and fingerprint, touch the number **1** and then press the “**reset**” button behind the door. To revert to unlocking with just the password or fingerprint, repeat this process.

### Opening the safe

- 1- Enter the password and press the “**#**” key (or place the desired finger on the sensor above the lock)
- 2- The green light will turn on, and the door will open.
- 3- Rotate the handle around the lock clockwise to open the door.

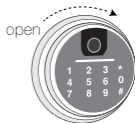

### **Opening with the Password:**

- 1- slide the black cover of the battery compartment (the rectangular section on the right side of the lock) to the right to open it
  - 2- insert the required batteries
  - 3- The lock light will turn on
  - 4- Sadid safes are activated with the factory code 1234
  - 5- Enter this password and press the “#” key.
  - 6- The green light will turn on.
- Rotate the lock handle in the clockwise direction to unlock.

### **Changing The Password**

- 1- Press the reset button located behind the door (inside the safe) within the circular slot.
  - 2- You will hear two beeps, and the blue light will turn on.
  - 3- Enter the new password (4 to 8 digits) and press the “#” key to confirm.
  - 4- The green light will turn on as a sign of confirmation
- Note: For assurance, while the safe box door is open, test the new password once!

### **Adding a Fingerprint**

- 1- Press the reset button located behind the door (inside the safe) within the circular slot.  
You will hear two beeps, and the blue light will turn on.
- 2- Place the desired finger on the fingerprint sensor.  
You will hear two beeps from the lock.
- 3- Remove your finger and place it on the sensor again.  
You will hear a long beep as confirmation and completion of the process

## Components:

1. Finger Print Scanner

2. Main Battery Case

3. Door Handle

4. Touch Key Pad

5. Magnetic Logo

6. Emergency Keys Input

7. Emergency Key



8. Power Bank Input

9. Power Bank

10. Reset Button

11. Ground Installation Point

12. Wall Installation Point

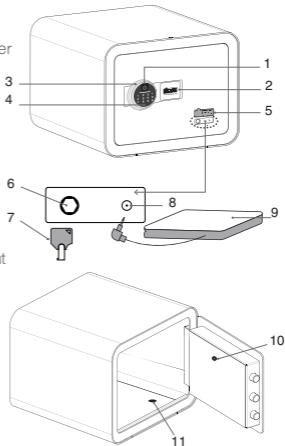

Rearview


## First Time Setup

### Opening Safe Boxes:


- Sadid Safe boxes will only be initially opened by using Factory Main Password & Also Master Key in some Models

## Wall Installation Method



## Ground Installation Method

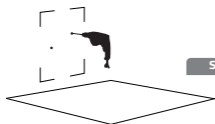

Step 1

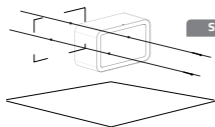

Step 2

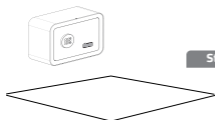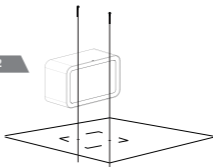

Step 3



The Ground installation points are located under the pedantals

## Safe Components Visual Guide

### Models:

Model Home Safe F.P. (Finger Print & Fire Proof)




### Sadid Safe Co. Anti-Theft & Fire Proof Safes

Fireproof and theft-resistant safes produced by Sadid Safe Security Innovators are the new generation of these products in Iran. The construction of the doors and bodies of these safes involves the use of high-thickness steel sheets. To enhance the resistance of these safes against moisture and heat, rock wool has been used. The hinges of the fireproof safes from Sadid are installed in the interior space. The possibility of connecting the safes to the ground is provided through the use of steel roll bolts.



# Safe Boxe User Manual

(Home Safe Touch & Finger Print)

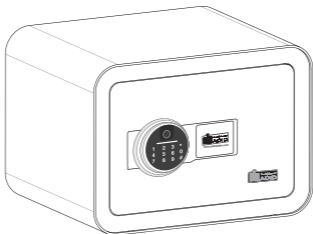

## Customer Services

☎ 021-91303713(194)

☎ 09338619119

☎ 09108619191

🌐 [www.sadidsafe.com](http://www.sadidsafe.com)